



### Talkabout T42 Owner's Manual English

### Brugervejledning til Talkabout T42

Dansk

### Talkabout T42 Benutzerhandbuch

Deutsch



MN003774A01-AA

Page: 1/12



### Talkabout T42 Owner's Manual en-US

### RF Energy Exposure and Product Safety Guide for Portable Two-Way Radios

#### Attention!

Before using this product, read the RF Energy Exposure and Product Safety Guide that ships with the radio which contains instructions for safe usage and RF energy awareness and control for compliance with applicable standards and regulation.

#### T42 Twin Pack

Package Content	T42
Radio	2
Belt clip	2
Stickersheet (16 pcs)	1
Owner's manual	1

#### T42 Triple Pack

Package Content	T42
Radio	3
Belt clip	3
Stickersheet (8 pcs)	3
Owner's manual	1

#### Personalization Stickers:


Stickers are provided in order to personalize and keep track of radios. Use permanent marker for the blank stickers.

#### Frequency Chart


Channel	Frequency (MHz)	Channel	Frequency (MHz)	Channel	Frequency (MHz)
1	446.00625	7	446.08125	13	446.15625
2	446.01875	8	446.09375	14	446.16875
3	446.03125	9	446.10625	15	446.18125
4	446.04375	10	446.11875	16	446.19375
5	446.05625	11	446.13125		
6	446.06875	12	446.14375		

\*Only Channels 1 to 8 are available by default. Channels 9 to 16 need to be activated by user before they can be selected. Channels 9 to 16 should only be used in countries where these frequencies are allowed by government authorities. Channels 9 to 16 are not allowed in Russia.

#### Radio Control Buttons

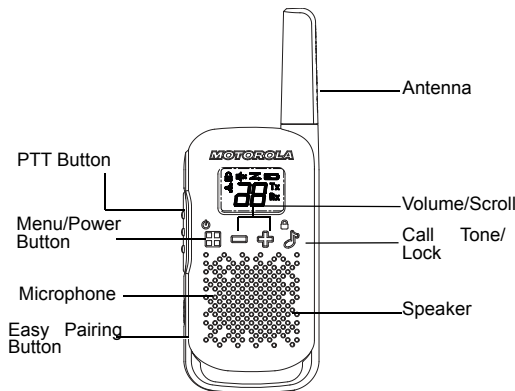

#### Radio Display

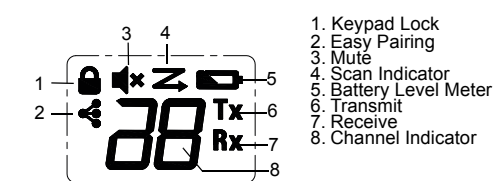

#### Installing the Batteries

1. Make sure your radio is OFF.
2. To remove the battery compartment door, press the tab at the bottom of the compartment door. Remove the door. Insert three AAA batteries into the battery compartment.
3. Replace the battery compartment door.

#### Battery Level and Low Battery Alert



#### Turning Your Radio On/Off

Press and hold the MENU/□ button to turn your radio ON/OFF.

#### Adjusting the Volume

Adjust the volume by pressing the ⇄ and ⇄ buttons.

#### Talking and Listening

All radios in your group must be set to the same channel in order to communicate.

1. Hold your radio 2 to 3 cm from your mouth.
2. Press and hold the PTT button while speaking. The Transmit Tx icon appears on the display.
3. Release the PTT button. You can now receive incoming calls. When you do, the Receive Rx icon appears on the display.

For maximum clarity, hold the radio 2 to 3 cm away and avoid covering the microphone while talking.


#### Talk Range

Your radio is designed to maximize performance and improve transmission range. Ensure the radios are at least 5 feet apart when in used.

#### Push-to-Talk Time-Out Timer

To prevent accidental transmissions and save battery life, the radio emits a continuous warning tone and stops transmitting if you press the PTT button for 60 seconds continuously.

#### Menu Options

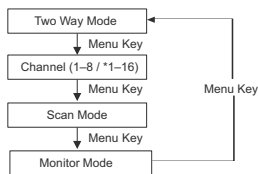

#### Selecting the Channel

The radio uses channel as the frequency to transmit.

1. Press Menu until the channel number starts to flash.
2. Press ⇄ or ⇄ to change the channel. Long press on these keys allows you to scroll through the channels rapidly to browse the codes.
3. Press PTT button to exit menu or Menu to continue set up.
  - Note: Your radio has eight channels by default. In countries where 16 channels are allowed, you can activate Channels 9 to 16 with the following steps:
    1. Press Menu until the channel number starts to flash.
    2. Press and hold down ⇄ and ⇄ simultaneously for 3 seconds until you hear a beep and "16" is displayed briefly.

#### Sub-Code

This radio does not have sub-code feature. When using this radio with radio models that use sub-code, please make sure the radios with sub-code have their sub-code disabled. Set sub-code to Zero.

#### Call Tones

Your radio is equipped with a call tone. To transmit a call tone, press PTT button.

#### Keypad Tones

You may enable or disable the keypad tones. You will hear the keypad each time a button is pushed.

1. Press and hold the ⇄ button, while turning the radio ON, it turns the keypad tone OFF.
2. To turn the Keypad Tone ON, turn the radio OFF and ON again without pressing the ⇄ button.

#### Roger Tone

You can set your radio to transmit a unique tone when you finish transmitting. It is like saying "Roger" or "Over" to let others know you have finished talking.

1. Press and hold ⇄ button while turning the radio ON, it turns the Roger Tone OFF.
2. Turn the radio OFF and ON again without pressing the ⇄ button to turn the Roger Tone ON.

#### Keypad Lock

To avoid accidentally changing your radio settings:

1. Press and hold PTT Key Lock until the Key Lock Indicator icon displays.
2. You can turn the radio on and off, adjust the volume, receive, transmit, send a call tone, when in the lock mode. All other functions remain locked.
3. Press PTT Key Lock and hold until the Key Lock Indicator is no longer displayed to unlock the radio.

#### Channel Scan Mode

Enables your radio to scan for active channels. When an activity is detected, your radio lands (stays) on that channel for 2 seconds. To transmit on that channel, press the PTT button. When an activity on the landed channel ends, your radio continues scanning other channels.

To turn the channel scan ON:

1. MENU/□ to enter menu. Advance until = blinks.
2. PTT button to turn ON channel scan.

MENU/□ or PTT to turn OFF Scan mode.

#### Monitor Mode

Enables you to listen for weak signals on the current channel.

To turn the Monitor Mode ON:

1. MENU/□ button to enter menu. Advance through the menu until Rx icon blinks.
2. Press the PTT button for continuous listening. The Rx icon continues to blink.

To turn the Monitor Mode OFF:

Press the MENU/□ button to return to "Normal" mode. The Rx icon stops blinking.

#### Easy Pairing

This feature allows a group of radio users to program all their radios to the same Channel and Sub-Code settings quickly and simultaneously. Any one radio within the group can be designated as the "Leader's radio" and have it's Channel and Sub-Code settings transmitted to and copied by all the other radios in the group (Members' radios).

- Note:
- When the leader radio has no sub-code feature, such as this radio (T42), all radios in the group will have their sub-code set to 0 (Disable). When the sub-code is set to 0, all transmissions on the selected channel will be heard, regardless of the transmitting radio sub-code setting.
1. Pick any one of the radios as the "Leader's radio". On this radio, program the Channel and Sub-Code to the desired settings. See "Selecting the Channel" and "Selecting the Sub-Code" sections in this user manual. The sub-code for T42 radio is fixed at zero and cannot be programmed.
  2. To copy the channel and Sub-Code combination to all the other "Members' radios", press and hold the ⇄ button on the Members' radios until you hear a beep. Release the button after the beep, and wait for the transmission from the Leader's radio.
    - Note:
      - You will see the ⇄ icon blinking on the display. This confirms that the radio is in Easy Pairing mode waiting to receive the Channel and Sub-Code settings from the Leader's radio. All Members' radios will remain in this mode for 3 minutes.
    - A group with many radios should have all users take this step at the same time, so all radios can be programmed in one go.
  3. On the Leader's radio, press and hold down the ⇄ button until you hear a double beep.
    - Note:
      - At the double beep, this radio's Channel and Sub-Code settings will be transmitted, which will be received and copied by all the other (Members') radios.
      - The Leader's radio must make this transmission when all the Members' radios are still in the Easy Pairing mode, otherwise the transmission will not be picked up.
      - On the Leader's radio, user must remember not to release the button on the first (single) beep, otherwise this radio will become another Member's radio. If that happens, you can press PTT to escape, and retry the steps described in #3 again.
      - If the Leader's radio is set to a channel between 9 and 16, please ensure that all Members' radios have channels 9 to 16 activated.
      - When a Member's radio with only eight Channels is being Easy-Paired by a Leader's radio on Channel 9 or above, Easy-Pairing will fail, indicated by three short beeps, and "r" is displayed briefly.
      - When the Leader's radio does not have sub-code feature, all members' radios will have their sub-code set to zero (Disable). When a radio sub-code is set to zero, all transmissions received on the channel will be sent to the speaker, regardless of the sub-code embedded in the transmission.
      - This radio (T42) does not have sub-code feature and is not compatible with radios with sub-code enabled. Please ensure all radios in the group have their sub-code disabled (Sub-code is set to Zero). With Easy pairing, either use T42 as the leader, or ask the Leader to set sub-code to zero before performing easy pairing.

#### Warranty Information

The authorized Motorola Solutions dealer or retailer where you purchased your Motorola Solutions two-way radio and/or original accessories will honour a warranty claim and/or provide warranty service.

Please return your radio to your dealer or retailer to claim your warranty service. Do not return your radio to Motorola Solutions.

In order to be eligible to receive warranty service, you must present your receipt of purchase or a comparable substitute proof of purchase bearing the date of purchase. The two-way radio should also clearly display the serial number. The warranty will not apply if the type or serial numbers on the product have been altered, deleted, removed, or made illegible.

What Is Not Covered By The Warranty

- Defects or damage resulting from use of the Product in other than its normal and customary manner or by not following the instructions in this user manual.
- Defects of damage from misuse, accident or neglect.
- Defects of damage from improper testing, operation, maintenance, adjustment, or any alteration or modification of any kind.
- Breakage or damage to aerials unless caused directly by defects in material or workmanship.
- Products disassembled or repaired in such a manner as to adversely affect performance or prevent adequate inspection and testing to verify any warranty claim.
- Defects or damage due to range.
- Defects or damage due to moisture, liquid or spills.
- All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- Products rented on a temporary basis.
- Periodic maintenance and repair or replacement of parts due to normal usage, wear and tear.

#### Copyright Information

The Motorola Solutions products described in this manual may include copyrighted Motorola Solutions programs, stored semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola Solutions, certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form, the copyrighted Motorola Solutions programs.

Accordingly, any copyrighted Motorola Solutions computer programs contained in the Motorola Solutions products described in this manual may not be copied or reproduced in any manner without express written permission of Motorola Solutions. Furthermore, the purchase of Motorola Solutions products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola Solutions, except for the normal non-exclusive royalty free license to use that arises by operation of law in the sale of a products.

MOTOROLA, MOTO, MOTOROLA SOLUTIONS and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

© 2017 Motorola Solutions, Inc. All rights reserved.

### Brugervejledning til Talkabout T42 da-DK

### Vejledning om RF-energieksponering og produktsikkerhed til bærbare tovejsradioer

#### OBS!

Inden brug af radioen skal du læse vejledningen om RF-energieksponering og sikkerhed, der leveres sammen med radioen. Vejledningen indeholder instruktioner omkring sikker brug, opmærksomhed omkring forekomst af RF-energi og kontrol af overholdelse af gældende standarder og bekendtgørelser.

#### T42-tostyckspakke

Pakkens indhold	T42
Radio	2
Bælteclips	2
Selvklæbeark (16 stk.)	1
Brugervejledning	1

#### T42-trestyckspakke

Pakkens indhold	T42
Radio	3
Bælteclips	3
Selvklæbeark (8 stk.)	3
Brugervejledning	1

#### Etiketter til personlig tilpasning:


Etiketter leveres med henblik på personlig tilpasning og for at holde styr på radioerne. Brug permanent markør til de tomme etiketter.

#### Frekvenstabell


Kanal	Frekvens (MHz)	Kanal	Frekvens (MHz)	Kanal	Frekvens (MHz)
1	446,00625	7	446,08125	13	446,15625
2	446,01875	8	446,09375	14	446,16875
3	446,03125	9	446,10625	15	446,18125
4	446,04375	10	446,11875	16	446,19375
5	446,05625	11	446,13125		
6	446,06875	12	446,14375		

\*Kun Kanal 1 til 8 er tilgængelige som standard. Kanal 9 til 16 skal aktiveres af brugeren, før de kan vælges. Kanal 9 til 16 må kun bruges i lande, hvor myndighederne tillader brug af disse frekvenser. Kanalerne 9 til 16 må ikke anvendes i Rusland.

#### Radioens kontrolknapper

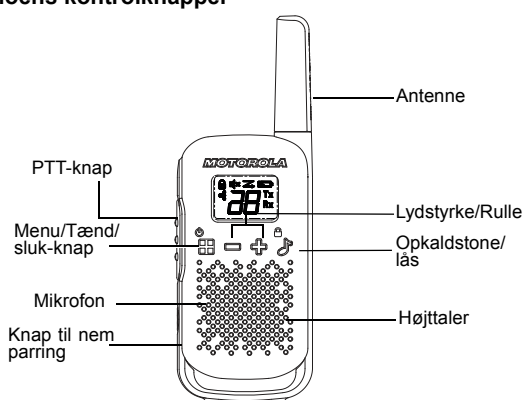


#### Radiodisplay

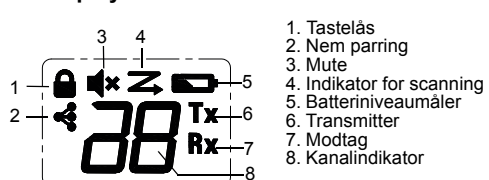

#### Installer batterierne

1. Sørg for, at radioen er SLUKKET.
2. Du kan fjerne dækslet til batterirummet ved at trykke på tappen nederst på dækslet. Fjern dækslet. Isæt tre AAA-batterier i batterirummet.
3. Sæt dækslet til batterirummet tilbage på plads.
 
#### Batteriniveau og alarm for lavt batteriniveau



#### Sådan tænder og slukker du for radioen

Tryk på knappen MENU/□, og hold den nede for at TÆNDE/SLUKKE radioen.

#### Justering af lydstyrken

Juster lydstyrken ved at trykke på knapperne ⇄ og ⇄.

#### Tale og lytte

Alle radioer i din gruppe skal være indstillet til samme kanal for at kunne kommunikere.

1. Hold radioen 2-3 cm fra munden.
2. Tryk på knappen PTT, og hold den nede, mens du taler. Ikonet for Transmission Tx vises på skærmen.
3. Slip knappen PTT. Du kan nu modtage indgående opkald. Når du gør det, vises ikonet for Modtag Rx på skærmen.

For at få den bedste lyd kvalitet skal du holde radioen 2 til 3 cm væk og undgå at dække mikrofonen, mens du taler.


#### Rækkevidde for tale

Radioen er designet til at maksimere ydeevnen og forbedre transmissionsrækkevidden. Sørg for, at radioerne er mindst 5 meter fra hinanden, når de anvendes.

#### Push-to-Talk timer for timeout

For at forhindre utilsigtede transmissioner og for at spare batteritid, udsender radioen en kontinuerlig advarselstone og standser transmissionen, hvis du trykker på knappen PTT kontinuerligt i 60 sekunder.

#### Menuindstillinger

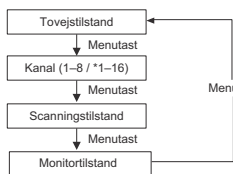

#### Sådan vælger du kanalen

Radioen bruger kanal som frekvensen for at transmittere.

1. Tryk på Menu, indtil kanalnummeret begynder at blinke.
2. Tryk på ⇄ eller ⇄ for at skifte kanal. Et langt tryk på disse taster giver dig mulighed for hurtigt at rulle igennem kanalerne for at gennemse koderne.
3. Tryk på knappen PTT for at forlade menuen eller Menu for at fortsætte opsætningen.

Bemærk: Radioen har som standard otte kanaler. I lande, hvor 16 kanaler er tilladt, kan du aktivere kanal 9 til 16 ved at udføre følgende trin:

1. Tryk på Menu, indtil kanalnummeret begynder at blinke.
2. Tryk samtidigt på ⇄ og ⇄, og hold dem nede i 3 sekunder, indtil du hører et bip, og "16" vises kortvarigt.

\*Kanal 9 til 16 må ikke anvendes i Rusland.

#### Delkode

Denne radio har ikke delkodefunktion. Når du bruger denne radio med radio modeller, der bruger delkode, skal du sørge for, at radioerne med delkode har deres delkode deaktiveret. Indstil delkode til nul.

#### Opkaldstone

Din radio er udstyret med en opkaldstone. Du transmitterer en opkaldstone ved at trykke på knappen PTT.

#### Tastaturtoner

Du kan aktivere eller deaktivere tastaturtonerne. Du hører tastaturet, hver gang du trykker på en knap.

1. Tryk på knappen ⇄, og hold den nede, mens du TÆNDER radioen. Det SLUKKER tastaturtonen.
2. Du TÆNDER tastaturtonen ved at TÆNDE og SLUKKE radioen igen uden at trykke på knappen ⇄.

#### Modtaget-tone

Du kan indstille radioen til at transmittere en unik tone, når du er færdig med at transmittere. Det svarer til at sige "Modtaget" eller "Skifter" for at lade andre vide, at du er færdig med at tale.

1. Tryk på knappen ⇄, og hold den nede, mens du TÆNDER radioen. Det SLUKKER Modtaget-tonen.
2. SLUK og TÆND radioen igen uden at trykke på knappen ⇄ for at TÆNDE Modtaget-tonen.

#### Tastelås

For at undgå utilsigtet ændring af radioens indstillinger:

1. Tryk på PTT Tastelås, og hold den nede, indtil ikonet for tastelåsindikator icon vises.
2. Du kan tænde og slukke radioen, indstille lydstyrken, modtage, transmittere og sende en opkaldstone i låst tilstand. Alle andre funktioner forbliver låst.
3. Tryk på PTT Tastelås, og hold den nede, indtil ikonet for tastelåsindikator icon ikke længere vises, for at låse radioen.